



Codes de programmation pour la télécommande vocale Helix

Vous utilisez la télécommande à touches surdimensionnées?

Utilisez les codes suivants : **10810, 11685, 11791, 11786, 12337, 11712, 11913**

Téléviseurs

0 à C	
888	14159
Accurian	11803
Acer	11339, 14143
Admiral	10093, 10463
Advent	11570
Affinity	13717, 13577, 13716
Aiwa	11362
Akai	10702, 11675, 11688, 11689, 11692, 11207, 11385, 12232, 11935, 11676, 13332, 10765
America Action	10180
AOC	11589, 11365, 12014, 12087, 12621, 11590, 13707, 11089
Aomni	11623



Apex Digital	12397, 10765, 10879, 10748, 11217, 11991, 10890
Ario	12397
Astar	11531, 11738
Asus	13340, 10702, 11867
Asustek	13340, 10702, 11867
Atak	12397
Atyme	12746
Audiovox	11276, 11865, 10180, 10875, 11564, 11868, 11951, 10846, 12413, 10802, 11766, 11769, 11952, 13065, 10451, 11803
Aumark	10060
Auria	12014, 12183, 12087, 12855
Aventura	10171
Avera	12397, 12049
Avol	13118, 13382, 12397
Axion	11958, 12049
B & O	11620



Bang & Olufsen	11620
Bell & Howell	10154
BenQ	11315, 11032, 13706
Berkshire	10047
Bolva	12397
Bradford	10180
Broksonic	10463, 11892, 11935, 11938, 13118
Calypso	12183
Carver	10054
Casio	11205
Celera	10765
Champion	11362
Changhong	13477, 10765, 11589
Cineon	13951
Citizen	11669, 11671, 11672, 11892, 11935, 10463, 10060



Clarion	10180
Coby	13478, 12315, 12183, 12306, 12344, 12314, 12345, 12338, 12326, 12340, 13629, 11538, 12347, 12348, 12560, 13646
Commercial Solutions	10047, 11447
Contec	10180
Contex	14053
Craig	13423, 11687, 10180
Crosley	10054, 13115
Crown	10180
Curtis	12855, 13577, 12397, 13895, 12352, 13939, 14035, 11991, 13636, 11326, 11314, 12337, 13154, 13228, 13382, 13595, 13717
Curtis Mathes	10060, 10451, 10702, 11661, 10054, 11457, 10047, 10093, 10145, 10154, 11347, 11959, 12496
CXC	10180
CyberHome	10794
Cytron	11326



D à H	
D.Boss	11474
Daewoo	11661, 10451, 11909, 13115, 11689
Dell	11264, 11080, 11178
DGM	11435, 12196
Diamond Vision	11996, 11997
DiBoss	11474
Digistar	11565
Digital Lifestyles	11765, 11822
Digitrex	14207
Disney	11892, 12152, 11665
Dukane	11398, 11457
Dumont	10017
Durabrand	10463, 10171, 11570, 11665, 10178, 10180, 11034
Dynex	12049, 11463, 11785
Electric Mirror	13166
Electrograph	11623, 11755
Electrohome	10463, 11672, 11570, 11670
Electron	12397, 12855
Element	13559, 11756, 11687, 12183, 12964, 12746, 13907, 11886, 11524



Elite	13867, 11457
Emerson	10171, 11864, 10463, 11963, 10180, 11913, 11886, 13623, 10178, 11661, 12183, 11665, 10451, 11909, 10154, 11997, 13559
Emprex	11422, 11546, 11765
Encross	10876, 11474
Envision	11589, 11365, 12087, 12014, 10813, 12621, 11454
Epson	11122
Epworth	11362
EQD	12014, 12087
EQD Auria	12014, 12087
ESA	10171, 10702, 11963, 11913
eTec	12397
Exorvision	13559
Favi	13382
Fisher	10154, 11362
Fluid	12964, 13907
Fujitsu	10853, 10809, 10683, 12008



Funai	10171, 11864, 10180, 11913, 11963
Furrion	13332, 14093
Futuretech	10180
Gateway	11755, 11756
GE	11447, 10047, 11347, 10451, 10051, 10178, 10765
General Electric	11447, 10047, 11347, 10451, 10051, 10178, 10765
GFM	11864, 10171, 11665, 11886, 11963, 11865
Gibraltar	10017
Go Video	11823, 10886, 11826, 11831, 10060
GoldStar	10178
GPX	13980, 13977, 12360
H & B	11366
Haier	12309, 11756, 13382, 13118, 12293, 11589, 11570, 12352, 11034, 11689, 10876, 13204
Hallmark	10178
Hanns.G	11783
Hannspree	11348, 11745, 11783
Harsper	11366



Harvard	10180
Havermy	10093
Helios	10865
Hello Kitty	10451
Hewlett Packard	11642, 11089, 11088, 11101, 11867
Hisense	12183, 11756, 11314, 12098, 13794, 11660, 10748, 12049, 13382
Hitachi	11643, 11756, 10145, 11345, 12679, 11589, 13007, 13382, 10679, 12360, 10877, 10650, 11670
Hiteker	13118
HP	11642, 11089, 11088, 11101, 11867
Hyundai	13418, 11219, 10849, 11294
I à O	
I-Inc	11746
iLo	11665, 11684, 11990, 11603, 11463, 10171, 11286
Infinity	10054
InFocus	11366, 11447, 11756
Initial	11990, 11603
Insignia	12049, 11756, 11564, 11326, 11641, 11785, 11892, 12002, 11204, 11517, 10171, 10463, 11385, 11660, 11963, 12417, 12751



Inteq	10017
iRIS	12189
iSymphony	13118, 13382, 13094
JBL	10054
JCM	12189, 12746
Jensen	11326, 13204, 11299
JVC	11774, 12321, 10731, 13118, 11524, 10650, 14053, 14105, 11570, 11670, 10463, 10683, 11756, 11892
jWin	13118
KC	14182
KDS	11498, 11687
KEC	10180
Kenmore	13559
Kingston	13284
KLH	10765
Kolin	11240
Konka	11385, 11831, 11641



Kost	11483, 11262
Kreisen	11474, 10876
KTV	10180
Legend	12397, 12309, 12352
LG	12731, 10178, 11178, 11637, 10017, 10442, 11530, 11756
LiteOn	11088
LXI	10154, 10178, 10017, 10047, 10156, 11347
MAG	11687, 11498
Magnasonic	11913
Magnavox	13623, 11454, 11867, 10054, 12597, 11913, 11963, 11990, 11198, 11365, 11525, 11755, 10171, 10051, 10802, 11756
Marantz	10054, 11398, 10855, 11454
Maxent	11755, 11757, 11714
MB Quart	11868
Megatron	10145, 10178
Memorex	10463, 11570, 11892, 11938, 10178, 11670, 11687, 10702, 11665, 11785, 10060, 10150, 10154, 10877, 11671, 11924, 11927
MGA	10150, 10178
Micro	11436



MicroTEK	13951
Midland	10017, 10047, 10051
Mintek	11603, 11990
Mitsubishi	11250, 10150, 10178, 11797, 10093
Motorola	10093
MTC	10060
Multitech	10180
NAD	10156, 10178, 10866
Naxa	14093, 12104, 13154, 13382, 13423
NEC	11797, 11398, 11704, 10876, 12293, 12026, 11314
NetTV	11755
New Acoustic Dimension	10156, 10178, 10866
Nexus	11564, 12183
Nexus Electronics	12183
Nikko	10178, 10017, 10047, 11347, 10154, 10156
Niko	11591, 11745
Norcent	11365, 12087, 11589, 10824, 11591, 10748, 11089, 11590, 11745
Norwood Micro	11286, 11303
NuVision	12158, 11657, 12397



oCOSMO	13899
Ölevia	11610, 11240, 11144
Onn	11756, 12397, 12434
Onwa	10180
Optimus	10650, 11457, 11927, 11913, 11924, 10154, 10679
Optique	12189
Optoma	10887
Optonica	10093
Orion	10463, 11463, 11938, 11670, 11892

P à S

Panasonic	11480, 10650, 10051, 11927, 11947, 11924, 10047, 10054, 10060, 10093, 10145, 10150, 10154, 10156, 10171, 10178, 11347
PARK	12104
PDI	11474
Philco	10054, 10171, 11665, 11963, 10463
Philips	11867, 11454, 10054, 12597, 13623, 10690, 10171, 10017, 11913, 11990, 11755, 11963, 11365, 11198, 11483, 11756
Philips Magnavox	10054, 12597, 11454, 11867, 10171, 13623



Pioneer	11457, 10679, 10866, 11398, 10650, 12434
Planar	10679, 10877, 11589, 12014, 13706
Polaroid	11498, 11769, 11276, 14035, 11538, 11687, 11385, 11524, 11767, 10765, 11991, 11327, 11762, 10865, 11314, 11326, 11565, 11766, 12063, 11262, 11286, 11328, 12002, 12120, 13382, 11341, 13118
Portland	11661, 10451
Power Acoustik	13065
Prima	12309, 11785
Prism	10051
Proscan	13577, 13382, 12183, 13717, 12746, 13332, 14053, 13794, 13636, 13895, 13559, 14035, 13899, 13939, 11347, 12147, 14207, 13118, 13907, 14093, 10047, 11447
Proton	10178, 11546
Protron	11323
Proview	11687, 11498
Pulsar	10017
Pyle	12196, 12641
Pyle Home	12196



Quasar	13118, 13899, 13382, 10051, 10650, 11927, 14207, 11924
Qumi	11369
RadioShack	10180, 10178, 10154, 10047
RCA	12746, 12434, 11447, 13577, 13382, 13332, 13717, 12932, 13895, 12183, 14053, 13559, 13794, 13636, 13939, 12855, 13899, 10679, 13477, 14035, 11661, 11958, 11959, 10093, 11385, 11868, 12002, 13938, 14093, 10051, 11670, 11756, 13894, 10047, 11347
Realistic	10154, 10180, 10178
RevolutionHD	11623
Roku	11756, 12049
Runco	11457, 11629, 11398, 10017
Sampo	11755
Samsung	12051, 10702, 10060, 11959, 10766, 10650, 10814, 10178
Sansui	11892, 10463, 11670, 14053, 11935, 11463, 11938, 11409, 10171, 13559
Sanyo	11142, 11756, 10154, 11362, 11785, 12049, 11276, 11480, 10054, 11564
Sceptre	13899, 12337, 11217, 11360, 10878
Scotch	10178



Scott	10178, 11711, 10180
Sears	10054, 10154, 10156, 10171, 10178, 10047
Seiki	13559, 12964, 13560, 13382, 10178
Seiko Epson	11122
Seleco	11348
Sens	11865
Sharp	12360, 11756, 10093, 12183, 11589, 11407, 13867
Sherwood	11399, 13061
Sigmac	13477, 13423
Signature	10054
Signature2000	10054
Signet	11262
Silo	13794, 13899, 13477, 14182
Silo Digital	13794, 13899, 13477, 14182
SkyVue	12731, 12360
Skyworth	13253, 11314, 11799
Solé	11483, 11623, 11366, 12075, 11530
Sony	10810, 11685, 11786, 11791
Soundesign	10178, 10180
Sova	11952



Soyo	11826, 11746, 11830, 11831, 11546, 11828
Spectroniq	11498, 11687
Speler	14105, 12434
Squareview	10171
SSS	10180
Starlite	10180
SunBriteTV	12337, 11420, 11435, 11610
Superscan	10864, 10093, 10171
Supersonic	13154, 12104, 12309, 13595, 13204, 13894
SVA	10748, 10865, 11963
Sylvania	11864, 10171, 10054, 11963, 11913, 11886, 11665, 11314, 13332, 13577, 14053
Symphonic	10171, 11913, 11963, 10180
Syntax	11610, 11240, 11144

T à Z

Tandy	10093
Tatung	11286, 12496, 11303, 11756, 11101
TCL	11756, 12434
Technicolor	13577



Technics	10051, 10650, 10017, 10047, 11347
Techview	12004
Techwood	10051
Teco	11578
Teknika	10054, 10180, 10060, 10150
TMK	10178
TNCi	10017
Toshiba	11524, 10156, 11935, 12684, 11959, 11704, 11343, 10650, 10060, 11369, 10154, 10702
Toshinaer	11746
TruTech	11665, 11723, 12066, 11865
TVS	10463
Ultra	11323
Upstar	14182, 13899
US Logic	11286, 11303



V7 Videoseven	12087
Venturer	11868, 11865
Vidao	12397
Videoseven	12087
Vidikron	11398, 11457, 11629, 10054
Vidtech	10178
Viewsonic	13794, 12014, 11627, 13706, 12087, 11755, 10864, 11330, 11365, 12111, 12049, 10885, 11457, 11564, 11578, 11589, 11742, 11745
Viore	13118, 13382, 12352, 12104, 12496, 13094, 11684, 11811, 11207, 14105, 13154
Visart	11336
VisionQuest	11687, 13154, 13380, 11738, 11823
Vivitek	11369
VIZIO	11758, 12707, 11756, 12512, 10864, 10885
Vuon	13418
Wards	10054, 10178, 10017, 10156, 10047, 10051, 11347, 10060, 10154, 10180, 10866



Waycon	10156
Westinghouse	11712, 13559, 13579, 11756, 13382, 10885, 10810, 12293, 13094, 13470, 10889, 10890, 11282, 12337, 12397, 13908, 10451, 10463, 11217
White Westinghouse	11661, 11909, 10463, 11913
WinBook	11381, 11369
Wyse	11365
Xoceco	12309, 11785
Yamaha	11407
Zenith	10017, 10178, 10145, 12731, 11661, 11365, 11909, 11463, 10047, 10463