



# Codes de programmation pour une télécommande HDA-IR2.2 (DTA)

## Téléviseurs

	# à A
<b>888</b>	0471, 0701
<b>A. R. Systems</b>	0061, 0601, 0861, 0661, 0751
<b>Accent</b>	0021, 0061, 0861
<b>Acer</b>	2961, 3281
<b>Acoustic arch</b>	2911
<b>Acura</b>	0021
<b>Adcom</b>	1061
<b>Addison</b>	0931, 0201
<b>ADL</b>	2181
<b>Admiral</b>	0171, 0231, 0821, 0471
<b>Advent</b>	1901
<b>Adyson</b>	0081
<b>AEA</b>	0061, 0861
<b>AEG</b>	0861, 1031, 1951
<b>Affinity</b>	4071, 0881
<b>Agashi</b>	0471, 0081



<b>AGB</b>	1611
<b>Aiko</b>	0021, 0061, 0861, 0641, 0041, 0711, 0121, 0231, 0011, 0471, 0081
<b>Aim</b>	0061, 0121, 0701, 0861, 1521, 0341, 1701, 1301
<b>Airis</b>	3221
<b>Aiwa</b>	0981, 2341, 1981
<b>Akai</b>	0021, 0231, 0341, 0861, 0061, 0641, 2431, 0711, 1481, 0011, 0041, 0351, 1241, 2641, 0121, 1521, 0701, 1421, 1351, 1611, 1341, 0991, 0771, 0081, 1091, 0471, 0281, 0651, 1031, 2341, 0761, 1151, 2271, 2351
<b>Akashi</b>	1631, 0021
<b>Akiba</b>	0351, 0481, 0751, 0061, 0861
<b>Akira</b>	0821
<b>Akito</b>	0061, 0861
<b>Akura</b>	0061, 0351, 0471, 0861, 1271, 070, 0021, 0481, 1351
<b>Alaron</b>	0081
<b>Alba</b>	0021, 0061, 0861, 0051, 1351, 0351, 0821, 1371, 0641, 1271, 0621, 0081, 0431, 0231, 0811, 2341, 0731, 2351
<b>Alfide</b>	1241
<b>Alkos</b>	0041
<b>All-Tel</b>	1881
<b>Allorgan</b>	0081
<b>Allstar</b>	0061, 0861
<b>Ambassador</b>	0271



<b>Amplivision</b>	0081, 1371, 0531
<b>Amstrad</b>	0021, 0271, 0061, 1611, 0471, 0671, 0641, 0351, 0701, 0711, 0861, 1151
<b>Anam</b>	0061, 0861, 0021, 0501, 1871
<b>Anam National</b>	0061, 0861, 0501
<b>Andersson</b>	1951
<b>Anglo</b>	0021, 0471
<b>Anitech</b>	0021, 0471, 0061, 0861, 0481, 0191
<b>Ansonic</b>	1371, 0061, 0861, 0021, 1271, 0661, 0231, 0191, 0891, 0461, 0431, 1621
<b>AOC</b>	0021, 0101, 0171, 0201, 0281
<b>Aolingpike</b>	0471, 0701
<b>Apex</b>	1631, 4771, 0791, 0041, 1961, 0881
<b>Apollo</b>	0761
<b>Arc en Ciel</b>	0211
<b>Arcam</b>	0081
<b>Ardem</b>	1221, 1351, 0061, 0861
<b>Ario</b>	5101, 0281, 4401, 0881
<b>Aristona</b>	0861, 0061
<b>Arthur Martin</b>	0231
<b>ASA</b>	1621, 0181, 0581, 0111
<b>Asambal</b>	0861
<b>Asberg</b>	0061, 0861, 0191



---

<b>Asora</b>	0021
<b>Astra</b>	0061, 0861
<b>Asuka</b>	0351, 0081, 0471, 0481
<b>Asus</b>	1021, 3621
<b>ATD</b>	1301
<b>Atlantic</b>	0061, 0861, 0081, 0531, 0461
<b>Atori</b>	0021
<b>Auchan</b>	0231
<b>Audiosonic</b>	0021, 0061, 0661, 1721, 0211, 0861, 1351, 1341, 0081, 1371, 0561, 0471, 0351, 1221
<b>Audioton</b>	0081, 1221, 1371, 0471
<b>Audioworld</b>	1301
<b>Aumark</b>	0101
<b>Autovox</b>	0081, 0431
<b>AVP</b>	2341
<b>AWA</b>	0021, 0031, 0051, 0661, 0701, 0061, 0861, 1031, 0081, 0201, 0471, 3021
<b>Axxent</b>	0021
<b>Axxon</b>	1351

---



<b>B</b>	
<b>B&amp;D</b>	2181
<b>Baier</b>	1901
<b>Baihe</b>	0021, 0471, 0701
<b>Baile</b>	0001, 0021, 0661, 1211
<b>Baird</b>	0211, 2651, 0301, 0121, 0131, 0081, 0341, 2091
<b>Bang &amp; Olufsen</b>	0951
<b>BaoHuaShi</b>	0471, 0701
<b>Baosheng</b>	0021
<b>Barco</b>	0231
<b>Basic Line</b>	0021, 0661, 0061, 0351, 0231, 1271, 0861, 0481, 0081, 0751, 0341
<b>Bastide</b>	0081
<b>Bauer</b>	1701, 0021
<b>Baur</b>	0021, 0061, 0231, 0011, 0861, 1981
<b>Bazin</b>	0081
<b>Beaumark</b>	0281
<b>Beijing</b>	0001, 0021, 0341, 0371, 0471, 0661, 0701, 0801, 1211, 0041
<b>Beko</b>	1371, 1351, 0041, 1221, 1341, 0061, 0821, 0861, 1031, 1821
<b>Belson</b>	2071, 2711
<b>Bennett</b>	0861, 0061
<b>BenQ</b>	2511



---

<b>Beon</b>	0061, 0861, 0821
<b>Berthen</b>	1271
<b>Best</b>	0561, 1371
<b>Bestar</b>	0061, 0861, 1371, 0661
<b>Bestar-Daewoo</b>	0661
<b>Binatone</b>	0081
<b>Black Diamond</b>	1001, 1721, 0861, 0041, 1521, 1951
<b>Black Panther</b>	0191
<b>Black Star</b>	0431
<b>Black Strip</b>	0041
<b>Blackway</b>	0481, 0351
<b>Blaupunkt</b>	0011, 0551, 0401, 0331, 0751, 0261, 0051
<b>Blue Sky</b>	0061, 0351, 0861, 1271, 1351, 0811, 1341, 2411, 0481, 0751, 2341, 2071, 1821, 2971
<b>Blue Star</b>	0481
<b>Bondstec</b>	0431
<b>Boots</b>	0021, 0081
<b>Bosch</b>	0401, 0531
<b>BPL</b>	0061, 0481, 3111, 0861, 0341, 2551, 2691, 2791, 3131
<b>Brandt</b>	0211, 1061, 0441, 0491, 2651, 0961, 2981
<b>Brandt Electrique</b>	0491, 0441
<b>Brinkmann</b>	0061, 0861, 1271, 0821, 1221

---



<b>Brionvega</b>	0061, 0671, 0861
<b>Britannia</b>	0081
<b>Brother</b>	0471
<b>Bruns</b>	1221
<b>Broksonic</b>	4841, 4391, 4071, 4441
<b>BSR</b>	0231
<b>BTC</b>	0351
<b>Bush</b>	0021, 1001, 0051, 0861, 0061, 1201, 3231, 0351, 1351, 0481, 1271, 0621, 0231, 0641, 0661, 1301, 0471, 0811, 0341, 0081, 2521, 2341, 1591, 2271

**C**

<b>Caihong</b>	0021
<b>Caishi</b>	1631
<b>Canton</b>	0351
<b>Capsonic</b>	0471
<b>Carad</b>	1011, 0061, 0861, 1271
<b>Carena</b>	0751, 0061, 0861
<b>Carrefour</b>	0051, 0111, 0061, 0861
<b>Carver</b>	0261
<b>Cascade</b>	0021, 0061, 0861
<b>Casio</b>	0061, 0861, 0231
<b>Cathay</b>	0061, 0861
<b>CCE</b>	0061, 0081, 0861, 2641



<b>CE</b>	0861
<b>Celestial</b>	1711, 1721, 0041
<b>Centrex</b>	1631
<b>Centrum</b>	0861
<b>Centurion</b>	0061, 0861
<b>Century</b>	0431
<b>CGE</b>	0141, 0251, 0431, 0821, 1371, 0231
<b>Changcheng</b>	0001, 0021, 0471, 0661, 0701, 1211
<b>Changfei</b>	0021, 2641, 0661
<b>Changfeng</b>	0471, 0701, 1521
<b>Changhai</b>	0021, 2641
<b>Changhong</b>	0041, 1721, 0021, 0471
<b>Chengdu</b>	0021
<b>Ching Tai</b>	0021
<b>Chun Yun</b>	0021
<b>Chunfeng</b>	0021, 0471
<b>Chung Hsin</b>	0201, 0051
<b>Chunsun</b>	0021
<b>Ciil</b>	0311
<b>Cimline</b>	0021, 0351
<b>Cinema</b>	1241
<b>Cinex</b>	1151, 0861





<b>Citizen</b>	0101
<b>City</b>	0021
<b>Clarivox</b>	0061, 0821, 0861, 0111, 0191
<b>Clatronic</b>	0061, 0431, 1371, 0641, 1351, 0351, 0471, 0861, 0081, 0021, 0191, 0531, 1151, 1031, 1951
<b>Clayton</b>	0861
<b>CMS (hightec)</b>	0081
<b>Cobolt</b>	1631
<b>Coby</b>	0281, 2801, 3871, 3881
<b>Combitech</b>	2341
<b>Concorde</b>	0021
<b>Condor</b>	0531, 0061, 1371, 0861, 0081, 0021, 0481, 0191, 0431, 0821, 0891, 0231, 0471
<b>Conic</b>	1531, 0041, 2711, 1721
<b>Conrac</b>	1821
<b>Conrad</b>	0061, 0861
<b>Conrowa</b>	0021, 0471, 0701, 1301, 1521, 0261
<b>Contec</b>	0021, 0081, 0051, 0031, 0471, 0061, 0861
<b>Continental Edison</b>	0211, 0491, 0811
<b>Cosmel</b>	0021, 0561, 0061, 0861
<b>Crosley</b>	0141, 0431, 0251, 0231
<b>Crown</b>	0021, 1331, 0061, 1371, 1221, 0861, 0821, 0811, 1351, 1031, 1241, 1341, 0341, 0931



<b>Crown Mustang</b>	1241
<b>CS Electronics</b>	0081, 0351, 0431
<b>CTC</b>	0431
<b>CTX</b>	2511
<b>Curtis</b>	1981, 3631
<b>Curtis Mathes</b>	0101, 0171, 0241
<b>Curtis Young</b>	1981
<b>Cybertron</b>	0351
<b>Cytronix</b>	2321
<b>D et E</b>	
<b>D-Vision</b>	0061, 0861
<b>Daewoo</b>	1111, 1211, 0661, 2411, 0861, 0061, 0021, 0351, 0081, 0281, 0261, 2341, 1931, 0201, 3361, 1901, 1881, 1241
<b>Dainichi</b>	0351, 0081
<b>Daitsu</b>	0411
<b>Danichi</b>	0351
<b>Dansai</b>	0061, 0861, 0471, 0041, 0021, 0051, 0081, 0341
<b>Dansette</b>	0701
<b>Dantax</b>	1371, 1221, 1351, 1031, 1341, 2341
<b>Datsura</b>	0341
<b>Dawa</b>	0021, 0061, 0861
<b>Daytek</b>	1301, 2101, 3021, 1241



<b>Dayton</b>	0021, 2101
<b>Daytron</b>	0021, 0661, 0061, 0861
<b>Dayu</b>	0661, 1211
<b>de Graaf</b>	0341, 0071, 0231
<b>DEC</b>	1661, 1631
<b>Decca</b>	0061, 0121, 1611, 0861, 0081, 2341
<b>Deitron</b>	0061, 0861, 0661, 0351
<b>Dell</b>	2281
<b>Denko</b>	0471
<b>Denver</b>	0061, 0861, 1031, 2061, 1281
<b>DER</b>	0301
<b>Desmet</b>	0531, 0061, 0861, 0021
<b>Diamant</b>	0061, 0861
<b>Diamond</b>	0471, 1301, 0021, 1731, 0081, 0641, 1631, 1721
<b>Digatron</b>	0061, 0861
<b>Digihome</b>	1951
<b>Digiline</b>	0061, 0861, 0181, 1271
<b>DigiLogic</b>	0061, 0861
<b>Digitex</b>	1721
<b>Digitor</b>	0061, 0861, 1941, 1871
<b>Digivision</b>	0231
<b>DigiX</b>	1931



<b>DiK</b>	0061, 0861
<b>Dixi</b>	0021, 0061, 0861, 0431, 0081
<b>DL</b>	1631, 0061, 1281, 1881
<b>DMTECH</b>	3411, 2951
<b>Domeos</b>	1271
<b>Domland</b>	0691
<b>Dongda</b>	0021
<b>Donghai</b>	0021
<b>Dream Vision</b>	2481
<b>DSE</b>	1941, 1871, 0861, 1721
<b>DTS</b>	0021
<b>Dual</b>	0861, 0081, 2651, 0061, 0461, 0601, 0691, 0231, 1091, 1951
<b>Dual Tec</b>	0081
<b>Dumont</b>	0111, 1621, 0191, 0081, 0121
<b>Dunai</b>	0231
<b>Duraband</b>	0061, 0281, 0861
<b>Dux</b>	0061, 0861
<b>DVX</b>	1631
<b>Dynatron</b>	0061, 0861
<b>Dynex</b>	4061, 4071, 4641
<b>e:max</b>	1031
<b>Easy Living</b>	2271



<b>Ecco</b>	1581, 1301
<b>ECM</b>	0061, 0861
<b>Edison-Minerva</b>	0811
<b>Elbe</b>	0461, 0721, 0671, 1371, 0231, 0061, 0861, 0351, 0011, 0891, 1011, 0081, 1611
<b>Elbe-Sharp</b>	1611
<b>Elcit</b>	0431, 1611, 0191, 0231
<b>Elekta</b>	0021, 0061, 0861, 0471, 0481
<b>Element</b>	0281, 2801, 4401, 0911
<b>Elfunk</b>	0341, 0861
<b>ELG</b>	0061, 0861
<b>Elfin</b>	0061, 0081, 0861, 0181, 1621, 0231, 0021
<b>Elite</b>	0351, 0061, 0531, 0861
<b>Elman</b>	0191
<b>Elta</b>	0021, 0471, 0081
<b>Emco</b>	0431
<b>Emerson</b>	0271, 0281, 1351, 0431, 0061, 0861, 0641, 0111, 0481, 0531, 0231, 2411, 1221, 1371, 0541, 1271, 4671, 4021, 4071, 4521, 4661, 4731, 4391, 4421, 4461, 4651, 4431, 4031, 4441, 4681, 4631, 4701, 4711, 4341, 4561, 4311, 4471, 4481, 4201, 4571, 4601, 4351, 4721, 4741, 4821, 4841, 4861, 4871, 4881, 4911, 4941, 0591
<b>Emperor</b>	0481
<b>Enzer</b>	1521
<b>Erae</b>	2071



<b>Erres</b>	0061, 0861
<b>ESC</b>	0061, 0861, 0081
<b>Estele</b>	0231
<b>eTEC</b>	4641, 3641, 0881
<b>Ether</b>	0021
<b>Etron</b>	0001, 0021, 0061, 0861, 0231, 1721
<b>Eurofeel</b>	0471, 0081
<b>EuroLine</b>	0061
<b>Euroman</b>	0471, 0061, 0861, 0081, 1371
<b>Europa</b>	0061, 0861
<b>Europhon</b>	0061, 1611, 0191, 0231, 0081, 0861, 0431
<b>Evesham</b>	2271
<b>Excel</b>	0061, 0861
<b>Expert</b>	0461, 0231
<b>Exquisit</b>	0061, 0861, 0431
<b>F et G</b>	
<b>Fagor</b>	0061, 0861
<b>FairTec</b>	2071
<b>Family Life</b>	0061, 0861
<b>Feitang</b>	0021
<b>Feilu</b>	0021
<b>Feiyan</b>	0471, 0701



<b>Feiyue</b>	0021
<b>Fenner</b>	0661, 0021
<b>Ferguson</b>	0061, 0131, 0211, 1061, 0491, 0441, 2651, 0961, 0301, 0861, 0041, 0931, 1621, 0201, 0231, 0731, 3211, 2341
<b>Fidelity</b>	0231, 0081, 0861, 0061, 0641, 0701, 0301, 0471, 2341
<b>Filsai</b>	0081
<b>Finlandia</b>	0341, 0581, 0231, 0121, 0491, 2651, 0091
<b>Finlux</b>	0061, 0181, 0111, 1621, 0121, 0861, 1351, 0581, 0891, 1611, 0081, 0231, 1341, 0191, 1091, 0841, 0771, 0761, 0821, 1031, 1821
<b>Firstar</b>	0021
<b>Firstline</b>	0021, 0061, 0861, 0081, 0661, 0431, 1271, 0541, 1351, 0231, 2411, 0191, 0891, 0121, 0341, 2071, 1821, 2971, 1951
<b>Fisher</b>	1621, 0081, 0051, 0341, 1371, 0941, 0091, 0231, 0121
<b>Flatdisplays</b>	2701
<b>Flint</b>	0061, 0751, 0861, 1011, 0121, 0351, 0471
<b>Fluid</b>	0011, 0021, 0041, 0051, 0061, 0081, 0101, 0111, 0171, 0191, 0211, 0471, 0701, 0411, 0501, 1301, 1351, 1441, 1781, 1951, 2021, 0341, 2341, 2481, 0861, 2351, 3671, 2801, 3821, 4151, 3921, 3931
<b>FNR</b>	0191
<b>Fonda</b>	0751
<b>Force</b>	1951
<b>Forgestone</b>	0301
<b>Formenti</b>	0061, 0231, 0531, 0861, 1221, 0081



<b>Formenti-Phoenix</b>	0081, 0531
<b>Fortress</b>	0171
<b>Fraba</b>	0061, 0861, 1371
<b>Friac</b>	0021, 0061, 0191, 1371, 0861, 1011
<b>Frontech</b>	0231, 0431, 0471, 0081, 0021
<b>Fujimaro</b>	1881
<b>Fujitsu</b>	1261, 0121, 0191, 1861, 0081, 0231, 0021, 0601, 0061, 0861, 0461
<b>Fujitsu General</b>	0021, 0081, 0231
<b>Fujitsu Siemens</b>	2321, 2271, 3001, 1951, 1821
<b>Funai</b>	1271, 0471, 0701
<b>Furi</b>	0471, 0701
<b>Furichi</b>	1631
<b>Futronic</b>	0471, 1661, 1631
<b>Future</b>	0061
<b>G-Luzon</b>	3221
<b>Galaxi</b>	0191, 0061, 0861, 0231
<b>Galaxis</b>	1371, 0821, 0061, 0191, 0861
<b>Galeria</b>	0021
<b>Gateway</b>	2511
<b>GBC</b>	0231, 0021, 0661, 0351
<b>GE</b>	2651, 0281, 0481, 0961, 0491, 0211, 0441, 1061, 1311, 4201





---

<b>Geant Casino</b>	0231
<b>GEC</b>	0061, 0231, 0121, 0081, 1611, 0861
<b>Geloso</b>	0021, 0431, 0231, 0661
<b>General</b>	0211, 0491
<b>General Technic</b>	0021
<b>Genesis</b>	0021, 0061, 0861
<b>Genexxa</b>	0231, 0351, 0061, 0861, 0701, 0021
<b>Gericom</b>	1881, 2321, 2181, 1931
<b>Gevalt</b>	2071
<b>Giant</b>	0081
<b>Gintai</b>	1391
<b>Goldfunk</b>	1271
<b>Goldhand</b>	0081
<b>Goldline</b>	0561
<b>GoldStar</b>	0001, 0061, 0021, 0281, 1371, 0651, 0081, 0431, 0861, 0231, 0211, 1031, 0071, 1351, 1341, 0751
<b>Gooding</b>	0811
<b>Goodmans</b>	1111, 0051, 2271, 0061, 0121, 0861, 0081, 1351, 2651, 1271, 0641, 2411, 0661, 0471, 1611, 0021, 0811, 0041, 0771, 0961, 0441, 0351, 2341, 0891, 1211, 2521, 1931, 1281, 3021
<b>Gorenje</b>	1371
<b>GPM</b>	0351
<b>GPX</b>	0291, 4661

---



<b>Gradiente</b>	0931, 0261, 0061, 0861
<b>Graetz</b>	0231, 1351, 0641, 0061, 0341, 0861, 1951
<b>Grand Prix</b>	1151
<b>Granada</b>	0061, 0091, 0121, 0861, 0341, 0371, 0081, 1611, 0201, 0051, 0761, 0441, 0961, 0231, 0361, 2651
<b>Grandin</b>	0061, 0481, 0861, 0021, 0231, 1011, 1351, 1341, 1271, 0661, 0531, 0351, 0751, 1881, 2071, 1931, 2101, 3031
<b>Gronic</b>	0191, 0081, 0231
<b>Grundig</b>	0011, 0021, 0051, 0061, 0111, 0281, 0721, 0731, 0811, 0041, 0861, 1241, 1281, 1371, 1471, 1301, 0891, 2341, 2351, 2651, 2071, 3021, 3441
<b>Grunkel</b>	1951
<b>H et I</b>	
<b>H&amp;B</b>	1821
<b>Haaz</b>	1301
<b>Haier</b>	1301, 0471, 1601, 4981, 4921
<b>Haihong</b>	0021
<b>Haiyan</b>	0471, 0701
<b>Halifax</b>	0471, 0081
<b>Hallmark</b>	0281
<b>Hammerstein</b>	0471, 0101
<b>Hampton</b>	0081
<b>Hanimex</b>	0351, 2341
<b>Hankook</b>	0281



<b>Hannspree</b>	3911,0921
<b>Hanseatic</b>	0061,0531,0861,0231,1211,0481,0691,1111,1371,0021, 0081,0651,1351,1821,1221
<b>Hantarex</b>	0021,1611,0061,0861,0191,2951,3141
<b>Hantor</b>	0061,0861
<b>Harsper</b>	1881
<b>Harwa</b>	1581,2091
<b>Harwood</b>	0021,0701,0061,0861,0811
<b>Hauppauge</b>	0061,0861
<b>Havermy</b>	0171
<b>HCM</b>	0021,0481,0701,0061,0861,0081,0351,0821,0471
<b>Hedzon</b>	0861,0061
<b>Hema</b>	0081,0021
<b>Hicon</b>	3191
<b>Hifivox</b>	0211
<b>Higashi</b>	0081
<b>Highline</b>	0471,0061,0861
<b>Hikona</b>	0351
<b>Himitsu</b>	1601
<b>Hinari</b>	0021,0341,0051,0061,0861,0351,0231,0621,0731,0811, 0471,2341
<b>Hisawa</b>	0481,0351,0751,1011,2341,1351
<b>Hisense</b>	2971,0341,0021,0041,1521,0261,1631,0861,0471



---

<b>Hitachi</b>	0361, 0021, 0051, 0071, 0201, 0761, 0231, 2651, 0081, 0211, 0321, 0281, 1611, 0121, 0781, 0861, 0061, 0041, 1111, 1281, 0261, 0181, 0841, 0771, 2451, 1951, 1911, 4271, 4021, 4241, 4161, 4551, 4541, 4301, 4311, 4921, 4931
<b>Hitachi Fujian</b>	0201, 0361
<b>Hiteker</b>	0411
<b>Hitsu</b>	0021, 1011, 0751, 0351
<b>HMV</b>	0301
<b>Hoher</b>	1351, 0861, 1881, 1951
<b>Home Electronics</b>	1031
<b>Honeywell</b>	0871
<b>Hongmei</b>	0021, 0171, 0471
<b>Hongyan</b>	0471, 0701
<b>Hornyphon</b>	0061, 0861
<b>Hoshai</b>	0351, 0751, 0481
<b>Hua Tun</b>	0021
<b>Huafa</b>	0021
<b>Huanghaimei</b>	0021
<b>Huanghe</b>	0021
<b>Huanglong</b>	0021
<b>Huangshan</b>	0021, 0471, 0701
<b>Huanyu</b>	0081, 0661, 0471
<b>Huaqiang</b>	0471, 0701

---



<b>Huari</b>	0471, 0701
<b>Hugoson</b>	1961, 2181
<b>Hygashi</b>	0081
<b>Hyper</b>	0021, 0081, 0431
<b>Hypersonic</b>	0231
<b>Hypson</b>	0061, 0471, 0861, 0481, 1351, 1341, 0081, 0751, 2341, 1271, 1221
<b>Hyundai</b>	0061, 1881, 3201, 0861, 1301, 1631, 1521, 2751, 2241, 1901, 3361, 3031, 3311
<b>Iberia</b>	0061, 0861
<b>ICE</b>	0081, 0471, 0061, 0641, 0021, 0861, 0351
<b>Ices</b>	0351, 0081
<b>Ict</b>	0061, 0861
<b>Igo</b>	0931
<b>IlSonic</b>	3021
<b>Iiyama</b>	2181, 1961
<b>Imperial</b>	0061, 0141, 0231, 0431, 1371, 0821, 0251, 0861, 0891
<b>Imperial Crown</b>	0001, 0021, 0471, 0661, 0701, 1211
<b>Indiana</b>	0061, 0861
<b>InFocus</b>	2021, 1881
<b>Ingelen</b>	0231, 0811, 1011, 1351
<b>Ingersoll</b>	0021



<b>Inno Hit</b>	0021, 0121, 1611, 0061, 0861, 0351, 0081, 0431, 0191, 0481, 1951
<b>Innova</b>	0061
<b>Innovation</b>	0861, 0061
<b>Innowert</b>	1881, 2321
<b>Inotech</b>	1581, 1721
<b>Interactive</b>	0061, 0861, 0401, 0231, 1371, 0211, 0891
<b>Interbuy</b>	0021, 0061, 0471, 0431, 0861
<b>Interfunk</b>	0061, 0231, 0861, 0431, 0401, 1371, 0211, 0551
<b>Internal</b>	0061, 0861, 0661, 2411
<b>International</b>	0081
<b>Intervision</b>	0061, 0481, 0081, 0191, 0751, 0471, 0641, 0651, 0861, 1221, 1371, 0691, 0811, 0351, 0231, 0431, 0021
<b>Insigna</b>	4061, 4411, 4621, 4071, 4491, 4681, 4371, 4961, 3891, 4641, 4991
<b>Irradio</b>	0021, 0061, 0861, 0351, 0431, 0641
<b>IRT</b>	1301
<b>Isukai</b>	0351, 0061, 0861, 0481, 0751
<b>iSymphony</b>	0411
<b>ITC</b>	0081, 0531
<b>ITS</b>	0061, 0641, 0351, 0481, 0471, 0081, 0021, 0861
<b>ITT (Nokia)</b>	0231, 0761, 0771, 0301, 0581, 0341, 1031, 1011, 1091
<b>ITV</b>	0471, 0061, 0861, 0431, 0661



J et K	
<b>JDV</b>	0861
<b>Jean</b>	0051, 1391, 0021
<b>JEC</b>	0041
<b>Jialicai</b>	0021, 0471, 0701
<b>Jinfeng</b>	0341, 0371
<b>Jinque</b>	0021, 0471, 0701
<b>Jinta</b>	0021, 0471, 0701
<b>Jinxing</b>	0021, 0471, 1301, 0041
<b>JMB</b>	0061, 0861, 1111, 0661, 0731, 2341
<b>JNC</b>	3411, 1901
<b>Jocel</b>	1331
<b>Jubilee</b>	0861
<b>Juhua</b>	0471, 0701
<b>JVC</b>	0051, 0171, 0301, 0351, 0641, 0821, 0041, 1031, 0501, 0931, 1261, 1451
<b>Kaige</b>	0021, 0471, 0701
<b>Kaisui</b>	0021, 0351, 0481, 0061, 0081, 0861, 0751
<b>Kambrook</b>	0651
<b>Kamp</b>	0081
<b>Kanghua</b>	2551
<b>Kangli</b>	0001, 0021, 0471, 0661, 1211



<b>Kangyi</b>	0021, 0471, 0701
<b>Kapsch</b>	0231, 0461, 1621
<b>Karcher</b>	0061, 0861, 1371, 1011, 0231, 0481, 0191, 0471, 1591, 1351, 1031
<b>Kathrein</b>	0861, 0061
<b>Kawa</b>	0641
<b>Kawasho</b>	0081
<b>KB Aristocrat</b>	0231
<b>Kendo</b>	0061, 1011, 0671, 0861, 0231, 1371, 0651, 0891, 0191, 0431, 1151, 1221
<b>Kennedy</b>	0231, 0721
<b>Kennex</b>	0861
<b>Kenwood</b>	0181
<b>KIC</b>	0081, 2641
<b>Kingsley</b>	0081
<b>Kiota</b>	0001
<b>Kioto</b>	0861, 1301
<b>Kiss</b>	1681
<b>Kiton</b>	0861, 0061, 1271
<b>KLL</b>	0061
<b>Kneissel</b>	0061, 0461, 1371, 1011, 0891, 0661, 0861, 0721, 0671, 2341
<b>Kobra</b>	3191
<b>Kolster</b>	0061, 0861, 0191, 0431, 0351





<b>Kongque</b>	0021, 0471
<b>Konichi</b>	0021
<b>Konka</b>	0061, 0861, 0641, 1351, 0821, 0351, 1121, 1281, 1531, 1601, 2711, 1661
<b>Kontakt</b>	0811
<b>Korpel</b>	0061, 0861
<b>Korting</b>	1371, 0531
<b>Kosmos</b>	0061, 0861
<b>Kotron</b>	0701, 0471
<b>Koyoda</b>	0021
<b>KTV</b>	0081, 5101
<b>Kuaile</b>	0021, 0471, 0701
<b>Kuba (Electronic)</b>	0231
<b>Kulun</b>	0021
<b>Kunlun</b>	0341, 0371, 0471, 0661, 1211
<b>Kyoshu</b>	0701, 0821, 0471
<b>Kyoto</b>	0231, 0081
<b>L et M</b>	
<b>L&amp;S Electronic</b>	1881, 1351
<b>LaSAT</b>	1221, 1371
<b>Levis</b>	0861, 0061, 0231
<b>Leader</b>	0021



<b>Lecson</b>	0061, 0861
<b>Legend</b>	0021, 0561
<b>Lemair</b>	0891
<b>Lenco</b>	0061, 1391, 0021, 0231, 0661, 0861, 1621, 1281
<b>Lenoir</b>	0021
<b>Lesa</b>	0431
<b>Levis Austria</b>	0061, 0861
<b>Lexsor</b>	2091
<b>Leyco</b>	0061, 0471, 0121, 0861
<b>LG</b>	0001, 0021, 0061, 0081, 0101, 0201, 0211, 0231, 0281, 0431, 0651, 0861, 1031, 1301, 1341, 1351, 1371, 1761, 0081, 2071, 2801
<b>Liesenk &amp; Tter</b>	0061, 0401, 0861
<b>Liesenkotter</b>	0061, 0401, 0331, 0861
<b>Lifetec</b>	0061, 0021, 0861, 0661, 1271, 0351, 0471, 1261, 2271, 1351
<b>Lloyd's</b>	0001, 0021
<b>Local Calcutta TV</b>	0861, 0751, 0341
<b>Local Chennai TV</b>	0641, 0861, 0471, 0991, 0751, 2821, 0021
<b>Local Delhi TV</b>	0041, 3231, 0861, 0751
<b>Lodos</b>	0861, 1951
<b>Loewe</b>	1641, 0061, 0861, 1371, 0671, 1611
<b>Logik</b>	0001, 0031, 0101, 1301, 1581, 0021, 0301, 0471, 0641, 1931, 2181, 0861



<b>Logix</b>	1271,0861
<b>Longjiang</b>	0471,0701
<b>Luker</b>	0861
<b>Luma</b>	0061,0231,0891,0861,0661,0021,0671,0461
<b>Lumatron</b>	0061,0861,0671,0231,0461,0081,0471,0131
<b>Lux May</b>	0061,0021,0861
<b>Luxor</b>	0321,1951,0771,0841,0341,0231,0581,0761,0861,0081, 1091
<b>LXI</b>	0281,4201,0041,4251,4081
<b>Madison</b>	0061,0861
<b>MAG</b>	4401
<b>Magnadyne</b>	0191,0431,1611,0231
<b>Magnafon</b>	0191,1611,0081,0131
<b>Magnavox</b>	0061,0861,0051,1301,1631,5101,4661
<b>Magnum</b>	1151,1351,0061,0861,1341
<b>Mandor</b>	0471
<b>Manesth</b>	0061,0081,0861,0471,0531,0041,0231
<b>Manhattan</b>	0061,1901,0861,1271,0411,0231,1591
<b>Marantz</b>	0061,0861,0701,3311,5101,4081
<b>Mark</b>	0061,0861,0081,0661,0021,1351,1341
<b>Master's</b>	0861,0061
<b>Masuda</b>	0351,0641,0021,0471,0061,0081,0861



---

<b>Matsui</b>	0021, 0061, 0031, 0861, 0041, 0811, 0051, 0121, 0271, 0341, 0621, 0081, 0641, 0731, 0711, 1611, 0751, 0231, 0091, 0011, 0441, 1351, 2341
<b>Matsushita</b>	0501
<b>Matsuiama</b>	1281
<b>Maxam</b>	0471
<b>Maxdorf</b>	1581
<b>Maxim</b>	0861
<b>MCE</b>	0021
<b>ME</b>	0861
<b>Mediator</b>	0061, 0861
<b>Median</b>	0061, 1271, 1351, 0861, 1821, 1301, 2521, 2271, 1931, 2341
<b>Megas</b>	1011
<b>Megatron</b>	0281
<b>Meile</b>	0471, 0701
<b>Melectronic</b>	0021, 0581, 0061, 1621, 0211, 2651, 0231, 0431, 0181, 0081, 0491, 0661, 0771, 0841, 0891, 0861, 1111, 0011, 1211, 1351
<b>Memorex</b>	0021, 0281, 0861, 0501, 0101, 4071, 4661
<b>Memphis</b>	0561, 0121, 0021
<b>Mercury</b>	0001, 0061, 0021, 1301, 0471, 0861, 2641
<b>Merritt</b>	0231
<b>Metronic</b>	1061
<b>Metz</b>	0681, 0741, 1511, 0631, 1951, 0011, 0061, 0861, 1281, 1271, 3321

---



<b>MGA</b>	0281, 0061, 0861, 0351, 1621, 5101
<b>Micromaxx</b>	0061, 0861, 1271, 0891, 1821
<b>Microstar</b>	1821
<b>MicroTEK</b>	1721
<b>Midland</b>	4201, 4251
<b>Mikomi</b>	1951
<b>Minato</b>	0061, 0861
<b>Minerva</b>	0111, 0811, 0011, 1611, 0201
<b>Minoka</b>	0701, 0061, 0861
<b>Mirror</b>	2521
<b>Mistral Electronics</b>	0301
<b>Mitsubishi</b>	0201, 0171, 0061, 0281, 0051, 0301, 0011, 0861, 0341
<b>Mitsuri General</b>	0231
<b>Mivar</b>	1611, 1371, 1141, 0081
<b>Monaco</b>	0021
<b>Morgan's</b>	0061, 0861
<b>Motorola</b>	0171, 4401
<b>Moxell</b>	4401
<b>MTC</b>	0101, 1371, 0061, 0231, 0081, 5101
<b>Madan</b>	0021, 0341, 0371, 0471, 0701
<b>Multibroadcast</b>	0301
<b>Multistandard</b>	0191



<b>Multitech</b>	0021, 0191, 0231, 1221, 1271, 0061, 0081, 1371, 0861, 0431, 0471
<b>Murphy</b>	1621, 0081, 0121, 0231
<b>Musikland</b>	0061, 0351, 0431, 0861
<b>MyCom</b>	3021, 0281
<b>Myryad</b>	0861, 0061
<b>N et O</b>	
<b>NAD</b>	0241, 0281, 0231, 0041
<b>Naiko</b>	0061, 0861, 1031
<b>Nakimura</b>	0661, 0061, 0861
<b>Nanbao</b>	0021, 0471, 0701
<b>Nansheng</b>	0471, 0701
<b>Naonis</b>	0231
<b>Narita</b>	0861
<b>NAT</b>	0371
<b>National</b>	0371, 0341, 0041
<b>Naxa</b>	0901, 3651
<b>NEC</b>	0021, 0031, 0051, 0061, 0081, 0261, 0281, 0471, 0531, 0661, 0701, 0751, 0861, 0041, 0931, 1211, 1281, 1561, 2481, 5101, 4081
<b>Neckermann</b>	0061, 0011, 1371, 0861, 1981, 0551, 0231, 0401, 0821, 0431, 0081, 0891, 0531
<b>NEI</b>	0061, 0561, 0861, 0641, 0231
<b>Neovia</b>	1881, 3411, 3001, 2071, 1901, 3021, 3041, 2951



<b>Nesco</b>	0431, 2341
<b>Netsat</b>	0061, 0861
<b>Network</b>	0561
<b>Neufunk</b>	0061, 0021, 0861, 1011, 0351, 0481, 1351
<b>NewTech</b>	0061, 0021, 0861, 2651, 0081
<b>New World</b>	0351
<b>Newave</b>	0021, 1391, 0281, 0171
<b>Nfren</b>	1681
<b>Nfrlogic</b>	1351, 0861
<b>Nicamagic</b>	0081
<b>NIEJ</b>	0861, 0061
<b>Nikkai</b>	0121, 0041, 0351, 0061, 0861, 0081, 0471, 0561, 0021, 0051
<b>Nikkei</b>	1351
<b>Nikko</b>	0281, 5101
<b>Nippon</b>	0751
<b>Nishi</b>	0801
<b>Noblisko</b>	0191, 0111, 0081
<b>Nogamatic</b>	0211
<b>Nokia</b>	0231, 0761, 0771, 1031, 0841, 1091, 0341, 0661, 0581, 0531, 1011, 0211
<b>Norcent</b>	1631, 2981
<b>Nordic</b>	0081



---

<b>Nordmende</b>	0211, 1351, 1631, 0491, 2651, 0961, 0011, 0061, 0861, 0441, 0231, 2271
<b>Norfolk</b>	0231
<b>Normerel</b>	0061, 0861
<b>Novak</b>	0061, 0861
<b>Novatronic</b>	0061, 0181, 0661, 0861
<b>Novita</b>	3041
<b>NU-TEC</b>	0751, 1301, 1721, 0061, 0861
<b>Nurnberg</b>	0231
<b>Oceanic</b>	0231, 0341, 0761, 0771
<b>Odeon</b>	0471
<b>Okano</b>	1371, 0061, 0861, 0471, 0121, 0021
<b>Olidata</b>	3021
<b>Omega</b>	0471
<b>Omni</b>	1631, 1301
<b>Onida</b>	0861, 0931
<b>Onwa</b>	0641, 0991, 0351, 0711, 0191
<b>Opera</b>	0061, 0861
<b>Optimus</b>	0501, 0241
<b>Optoma</b>	3911, 3951
<b>Optonica</b>	0171
<b>Orbit</b>	0061, 0861

---





<b>ORcom</b>	3071
<b>Orion</b>	0061, 0271, 0731, 0621, 0861, 2351, 1351, 0531, 0541, 0031, 1611, 0021, 0191, 0471, 0701, 2341, 1931, 2091, 4071, 4661
<b>Orline</b>	0061, 0351, 0861
<b>Ormond</b>	1271, 0861, 0061
<b>Orsowe</b>	1611
<b>Osaki</b>	0121, 0351, 0081, 0471, 0701, 0061, 0661, 0621, 0861
<b>Osio</b>	0061, 0861
<b>Oso</b>	0351
<b>Osume</b>	0121, 0051, 0351, 0061, 0861
<b>Otto Versand</b>	0051, 1981, 0061, 0081, 0531, 2651, 0171, 0861, 0231, 0011, 0211, 0371, 0431, 0021, 0481, 1611
<b>P et Q</b>	
<b>Pace</b>	2341
<b>Pacific</b>	0061, 0861, 1351, 0731
<b>Pael</b>	0081
<b>Palladium</b>	1371, 0061, 0821, 0861, 0891, 1351, 0011, 1981, 0551, 0431, 0401, 0231, 0081
<b>Palsonic</b>	0471, 0701, 1581, 0061, 1601, 0081, 0651, 0351, 1301, 0861, 0001, 0821, 2761, 1591, 2091
<b>Panama</b>	0021, 0081, 0471, 0061, 0861, 0431
<b>Panashiba</b>	0001
<b>Panasonic</b>	0001, 0061, 0101, 0201, 0231, 0281, 0341, 0371, 0631, 0041, 0861, 0501, 1611, 1861, 2361, 2551, 1491, 1651



---

<b>Panavision</b>	0061, 0891, 0861
<b>Panda</b>	0021, 0341, 0371, 0471, 0701, 0041, 1301
<b>Papouw</b>	0061, 0861
<b>Pattie Cinema</b>	0231, 0081, 0531, 1371
<b>Pollee Marconi</b>	0211
<b>Pausa</b>	0021
<b>Pegasus</b>	0031
<b>Peng Sheng</b>	1631
<b>Penney</b>	0101, 0281, 4201, 0041, 5101, 4251, 4081
<b>Perdio</b>	0531, 0121, 0231, 0061, 0081, 0481, 0861
<b>Perfekt</b>	0061, 0861
<b>Philco</b>	0251, 0141, 0821, 0431, 0061, 0861, 0231, 1371, 0281, 0781, 5101
<b>Philex</b>	0301, 0231
<b>Philharmonic</b>	0081
<b>Philips</b>	0021, 0061, 0151, 0551, 0201, 0281, 0011, 0301, 0231, 0331, 0391, 0661, 0861, 1081, 1391, 1571, 2511, 2651, 3451, 3541, 3901, 3941, 3431, 5001, 2011, 5021, 4161
<b>Phocus</b>	0861, 1351
<b>Phoenix</b>	0061, 0861, 1371, 1221, 0231, 0121, 0081, 0531
<b>Phonola</b>	0061, 0861, 0301, 0081
<b>Pilot</b>	0861, 0061, 1331, 5101
<b>Pioneer</b>	1551, 0031, 0241, 0061, 0211, 0261, 0231, 0861, 0491, 1371, 2651, 1221

---



<b>Pionier</b>	1371, 1221
<b>Planar</b>	0971, 1051, 1101
<b>Plantron</b>	0061, 0861, 0471, 0021
<b>Playsonic</b>	1351, 0061, 0081, 0341, 1341
<b>Policom</b>	0191, 0211, 0231, 0111, 0141, 0251, 0011
<b>Polytron</b>	0481
<b>Polaroid</b>	4331, 4401, 0061, 4451, 4491, 2091, 4531, 2711, 4801, 4951, 0041
<b>Poppy</b>	0021
<b>Portland</b>	0661, 2411
<b>Powerpoint</b>	0811, 0061, 0861, 1301, 2711
<b>Prandoni-Prince</b>	0431, 1611, 0231
<b>Precision</b>	0081
<b>Premier</b>	0021, 0471
<b>President</b>	1631
<b>Prima</b>	0021, 0471, 0701, 2091
<b>Princess</b>	1301
<b>Prinston</b>	0861
<b>Prinz</b>	0121, 0231, 0321
<b>Profex</b>	0021, 0231
<b>Profi</b>	0021
<b>Proline</b>	0061, 0541, 0861, 1061, 1111, 0891, 0121, 3021



<b>Proscan</b>	3791, 5011, 0571, 3981, 4201, 4251
<b>Prosonic</b>	0061, 0861, 1371, 0661, 0641, 1271, 1351, 0081
<b>Protech</b>	0021, 0061, 0861, 0191, 0081, 0431, 0471, 0561, 0821, 1271, 0481, 0231, 1221
<b>Proton</b>	0001, 0281, 0021, 0101, 5011
<b>Preview</b>	4401
<b>Provision</b>	0861, 0061, 1351
<b>PVision</b>	2071, 1901
<b>Pye</b>	0061, 0861, 0661, 0701
<b>Pyle</b>	0291
<b>Pymi</b>	0021
<b>Qingdao</b>	0341, 0371, 0471, 0701
<b>Quadral</b>	0351
<b>Quasar</b>	0431, 0501, 1881, 0021, 1231
<b>Quelle</b>	0031, 0061, 1981, 0111, 0141, 1621, 0231, 0701, 0211, 0011, 0051, 0081, 0431, 0401, 0251, 0331, 0181, 1271, 0861, 0551, 0471, 0581, 0021
<b>Questa</b>	0051
<b>R à Se</b>	
<b>R-Line</b>	0061, 0861, 0231
<b>Radialva</b>	0211, 0351, 0231, 0061, 0861, 0491, 0561
<b>Radiola</b>	0061, 0861, 0081
<b>Radiomarelli</b>	1611, 0431, 0061, 0861



<b>RadioShack</b>	0061, 0861, 0281, 4201, 5101, 4251
<b>Radiotone</b>	0021, 0061, 0861, 1371, 0821, 0701, 1151, 1271, 0471
<b>Rank</b>	0111
<b>Rank Arena</b>	0051, 0991, 1521, 1251
<b>RBM</b>	0111
<b>RCA</b>	1061, 0101, 0171, 0281, 0961, 0441, 0411, 2651, 0241, 1521, 4201, 4251, 4261, 4211, 4581, 4131, 4021, 4221, 4231, 4171, 4501, 4611, 4281, 4291, 4311, 4321, 4591, 4831, 4851, 4891, 4901, 3981, 4081
<b>Realistic</b>	0281, 5101
<b>Recor</b>	0061, 0821, 0861
<b>Rectiligne</b>	0061, 0861
<b>Rediffusion</b>	0231, 0051, 0581
<b>Redstar</b>	0061, 0861
<b>Reflex</b>	0061, 0861, 1271
<b>Relisys</b>	1881, 1901, 1911, 2101, 2171, 2321
<b>Reoc</b>	1351, 1111, 2411
<b>Revox</b>	0061, 0861, 1371
<b>Rex</b>	0231, 0461, 0471, 0891, 0431
<b>RFT</b>	1371, 0121, 0471, 0061 0861, 1221
<b>Rhapsody</b>	0081
<b>Ricoh</b>	0061, 0861
<b>Rinex</b>	1581, 0821



---

<b>Roadstar</b>	0021, 0861, 0351, 0471, 0821, 0061, 1351, 1271, 0481, 2341, 2061, 2521
<b>Rodeo</b>	0061, 0861
<b>Rover</b>	0051, 1911
<b>Rowa</b>	0061, 0471, 1301, 0021, 0081, 1331, 1281, 0861
<b>Royal Lux</b>	1371, 0701, 0441
<b>Rukopir</b>	0861, 0061
<b>Runco</b>	5101, 0501, 1181, 1191
<b>Saba</b>	0211, 1061, 0231, 0491, 0961, 0441, 2651, 1611, 0851, 0501, 1351
<b>Sagem</b>	1011, 0751, 0481, 1771, 0411, 3351
<b>Saige</b>	0021
<b>Saisho</b>	0021, 0031, 1611, 0271, 0471, 0081, 0231
<b>Saivod</b>	0061, 0861, 1951, 1271, 1331
<b>Sakai</b>	0231
<b>Sakyno</b>	0751
<b>Salora</b>	0231, 0321, 1611, 0341, 0771, 0861
<b>Salsa</b>	0441
<b>Sambers</b>	0191, 1611
<b>Samsung</b>	0121, 0281, 1281, 0041, 2671, 4021, 4131, 4141, 4151, 4161, 4171, 4181, 4191, 0021, 0061, 0081, 0101, 0171, 0231, 0341, 0371, 0471, 0801, 0861, 1061, 1371, 2641, 1501, 0411, 3661, 3821, 3841, 3861, 5021
<b>Sandra</b>	0081

---



<b>Sanjian</b>	0471, 0701
<b>Sansui</b>	0061, 0861, 1421, 1301, 0641, 1411, 1871, 2821, 0991, 0751, 1941, 1521, 2071, 4071
<b>Santon</b>	0021
<b>Sanyo</b>	0341, 1391, 0031, 0051, 0091, 1371, 0121, 1621, 0081, 0941, 0701, 0021, 0041, 0231, 0061, 0201, 0861, 1221, 0261, 3811, 0281, 3921, 4071, 0171, 0501, 5101, 1321
<b>Sanyuan</b>	0021, 0171
<b>Save</b>	0061, 0861
<b>Saville</b>	2341
<b>SBR</b>	0061, 0861, 0301
<b>Sceptre</b>	3971, 4771, 5111, 1921, 1981
<b>Schaub Lorenz</b>	0231, 1351, 1031, 1221, 0661, 2071
<b>Schneider</b>	0061, 0861, 0351, 0431, 0641, 1271, 0691, 0601, 0461, 2651, 0081, 0231, 1151, 1351, 2411, 2341, 0111
<b>Scotch</b>	0281
<b>Scotland</b>	0231
<b>Scott</b>	2061, 0281, 4661
<b>Sears</b>	0281, 4201, 0041, 4661, 4251
<b>Seaway</b>	1111
<b>Seelver</b>	0861, 0061
<b>SEG</b>	0051, 0061, 0081, 0861, 0471, 1271, 0811, 0021, 0231, 1111, 0191, 0431, 0671, 1951, 0351, 2411, 1351
<b>SEI</b>	0191, 0271, 1611, 1981, 0231, 0061, 0861



<b>Seiki</b>	1981, 0911
<b>Sei-Sinudyne</b>	0191, 1611, 1981, 0061, 0861
<b>Seitech</b>	2181
<b>Seleco</b>	0231, 0461, 0671, 0891, 0641, 0051, 0471, 0581, 0721, 3911
<b>Sencora</b>	0021
<b>Sentra</b>	0041, 0351, 0021
<b>Serino</b>	1011, 0751, 0081, 0171
<b>Sh à Sy</b>	
<b>Shancha</b>	0471, 0701
<b>Shangai</b>	0021, 0341, 0371, 0471, 2641, 0701
<b>Sharp</b>	4001, 4021, 4031, 4011, 4041, 4051, 0051, 0171, 0301, 0331, 0451, 1611, 0931, 1551, 1951, 0021, 0501, 0551, 0281, 5031, 4161
<b>Shen Ying</b>	0021
<b>Shencai</b>	0021, 0471, 0701
<b>Sheng Chai</b>	0021
<b>Sheng Chia</b>	0021, 0171
<b>Shenyang</b>	0021, 0471, 1521
<b>Sherwood</b>	0021
<b>Shintoshi</b>	0061, 0861
<b>Shivaki</b>	0061, 0861, 0731, 0661, 0281
<b>Show</b>	0821, 0021, 0121
<b>Siarem</b>	0191, 1611, 0231





<b>Siemens</b>	0061, 0011, 0551, 0401, 0331, 0861, 0231
<b>Siera</b>	0061, 0861, 1281
<b>Siesta</b>	1371
<b>Sigmac</b>	0041
<b>Silo</b>	0041, 1041
<b>Silva</b>	0061, 0861, 0081, 0231, 1151
<b>Silva Schneider</b>	0861
<b>Silver</b>	0051, 0061, 0751, 0861, 1341, 0231
<b>SilverCrest</b>	0861, 0061
<b>Singer</b>	0021, 2431, 0061, 0861, 0191, 0431, 0721, 0441, 0231
<b>Sinotec</b>	1581
<b>Sinudyne</b>	0191, 0271, 1611, 0231, 1981, 0061, 0861, 2341
<b>Slay</b>	0061, 0481, 1931, 0281, 0861, 3071
<b>Skymaster</b>	0181
<b>Skysonic</b>	1521
<b>Skyworth</b>	0061, 0861, 0021, 0471, 1301, 1411, 1521
<b>Sliding</b>	1881, 1931, 2101, 3031, 1681
<b>SLX</b>	1271
<b>Smaragd</b>	0811
<b>Soemtron</b>	1881, 2321
<b>Sogera</b>	0531
<b>Solavox</b>	0231, 0121, 0061, 0861



<b>Sonawa</b>	0351
<b>Sonber</b>	0191
<b>Songba</b>	0021
<b>Soniko</b>	0061, 0861
<b>Soniq</b>	3191
<b>Sonitron</b>	0341, 1371, 0081
<b>Sonneclair</b>	0061, 0861
<b>Sonoho</b>	0021, 0061, 0861, 0471, 0481, 0081
<b>Sonolor</b>	0231, 0341, 1981, 0481
<b>Sontec</b>	0061, 0861, 1371, 0021
<b>Sony</b>	0031, 0051, 0061, 0141, 0171, 0191, 0261, 0611, 0861, 0501, 1981, 4381, 4751, 4761, 4781, 4791, 4811, 0161, 0221, 0381, 0421, 0521, 0831, 2591, 2541, 5041, 5051, 5061, 5071, 5081, 5091
<b>Sound &amp; Vision</b>	0191, 0351, 0661, 0061, 0861
<b>Soundesign</b>	0281, 4661
<b>Soudwave</b>	0061, 0821, 0861, 0531, 1341
<b>Sown</b>	0101, 0371, 0051, 0281
<b>Soyea</b>	1581
<b>Spectra</b>	0021
<b>Spectroniq</b>	4401, 0281
<b>Ssangyong</b>	0021
<b>Staksonic</b>	0021



<b>Standard</b>	0021, 0061, 0081, 0861, 0351, 0531, 0661
<b>Starlite</b>	0021, 0231, 0061, 0861, 0471, 0701
<b>Stenway</b>	0481, 0351
<b>Stern</b>	0231, 0461, 0471, 0891, 0721
<b>Stevison</b>	0861
<b>Strato</b>	0061, 0861, 0471, 0021
<b>Stylandia</b>	0081
<b>SunBrite</b>	0221, 0381, 1981
<b>Sonic Line</b>	0061, 0861
<b>Sunkai</b>	0541, 0621, 0751, 0351, 1011, 0061, 0811, 1881
<b>Sunstar</b>	0641, 0061, 0861, 0021, 0471
<b>Sunwatt</b>	0751
<b>Sunwood</b>	0061, 0861, 0021
<b>Superla</b>	1611, 0081
<b>Supersonic</b>	0341, 0861, 1301, 0471, 1701, 0751
<b>SuperTech</b>	0021, 0081, 0061, 0861, 0351
<b>Supra</b>	0281, 0661, 0021
<b>Susumu</b>	0351, 0441, 0491
<b>Sutron</b>	0021
<b>SVA</b>	1281, 1881, 1631
<b>Svasa</b>	1701
<b>Swissline</b>	0431



<b>Swisstec</b>	3071, 1931
<b>Sydney</b>	0081
<b>Sylvania</b>	4021, 4071, 4681, 4511, 4381, 4361, 4691, 4821, 0591, 1071, 1431, 2011, 2141, 2161, 2561, 2571, 2131, 2631, 3581, 3741, 5101, 4671
<b>Symphonic</b>	0831
<b>Synco</b>	0051, 0101, 0171, 0281
<b>Sysline</b>	0061, 0861
<b>Sytong</b>	0081
<b>T</b>	
<b>T + A</b>	0741
<b>Tacico</b>	0281, 0021
<b>Tai Yi</b>	0021
<b>Taishan</b>	0021, 0661
<b>Tandberg</b>	0631, 0891, 0211, 0561, 0671, 0231
<b>Tandy</b>	0351, 0121, 0171, 0081, 0231, 0431
<b>Targa</b>	2071
<b>Tashiko</b>	0051, 1391, 0081, 0501, 0261, 0231
<b>Tatung</b>	0861, 0021, 0051, 0061, 0121, 1611, 0101, 0081, 0031, 2341, 2511, 2271, 2071
<b>TCL</b>	1411, 0861, 0701, 1301, 3851, 1131, 1161
<b>TCM</b>	1351, 1821
<b>Tear</b>	0021, 1301, 0061, 0471, 0481, 0861, 0701, 0821, 0751, 1331, 1271, 0081, 1391, 2411, 0281, 0261, 1351, 1951, 1541



<b>TEC</b>	0081, 0431, 0021, 0441, 0561, 0461, 0061, 0861, 0231
<b>Tech Line</b>	0061, 0861, 1271, 1951
<b>Tech Lux</b>	2061
<b>Tehica</b>	0351
<b>Technema</b>	0531
<b>Technica</b>	0861
<b>Technics</b>	0501
<b>TechniSat</b>	0861, 0061, 0231, 0411
<b>Technisson</b>	1351
<b>Technol Ace</b>	4661
<b>Technosonic</b>	0061, 0861
<b>Techwood</b>	1951
<b>Technimagen</b>	0861
<b>Teco</b>	0021, 0051, 0171, 0281, 0351, 0471, 0931, 4401, 1361
<b>Tedelex</b>	0081, 1301, 1031, 0061, 0821, 0021, 2431, 0341, 1631, 1281, 0861
<b>Teiron</b>	0021
<b>Tek</b>	1661
<b>Teknika</b>	0101, 4661
<b>Tele System</b>	1901
<b>Teleavia</b>	0211, 2651, 0491
<b>Telecor</b>	0061, 0861, 0231, 0351, 0081, 0461, 0691



<b>Telefunken</b>	1061, 0141, 0961, 0211, 1281, 0441, 1301, 2651, 1331, 0851, 1721, 2551, 1531, 3071, 1631, 0491, 0251, 0131, 0061, 0861, 1221, 1351, 0581, 0041, 1381
<b>Telefusion</b>	0061, 0861
<b>Telegazi</b>	0061, 0231, 0461, 0351, 0471, 0861
<b>Telemeister</b>	0531, 0061, 0861
<b>Telesonic</b>	0061, 0861
<b>Telestar</b>	0021, 0061, 0861, 0701
<b>Teletech</b>	0021, 0061, 0861, 1271, 0431, 0561
<b>Teleton</b>	0051, 0081, 0231, 0461
<b>Televideon</b>	0531, 0231, 0081
<b>Televue</b>	0061, 0861
<b>Telexa</b>	0191
<b>Tempest</b>	0021, 0061, 0861, 0471
<b>Tennessee</b>	0061, 0861
<b>Tensai</b>	1621, 0351, 0531, 0061, 0861, 0081, 0021, 0181, 0661, 0641, 0651, 0431, 1341, 0231
<b>Tenson</b>	0531, 0021
<b>Tesla</b>	0061
<b>Tevion</b>	0861, 2711, 2271, 2321, 0061, 0041, 1151, 1821, 1271, 1881, 1351
<b>Texet</b>	0081, 0351, 0661, 0021
<b>Texla</b>	1631
<b>Thomson</b>	0061, 0211, 0441, 0491, 0531, 0861, 0961, 1061, 0081, 2651



---

<b>Thorn</b>	0041, 0201, 0301, 0061, 0211, 0121, 0131, 0361, 0141, 2651, 1621, 0231, 1981, 0251, 0861, 0011, 0031, 0441, 0051, 0091, 0661, 0111
<b>Thorn-Ferguson</b>	1621, 0201, 2651, 0211, 0301, 0231, 0441, 0861, 0131, 0041
<b>Tiane</b>	0171
<b>Tiny</b>	2091
<b>Tiny Digital</b>	1201
<b>TMK</b>	0271, 0281
<b>Tobishi</b>	0351
<b>Tobo</b>	0021, 0471, 0701
<b>Tokai</b>	0121, 0061, 0861, 0561, 1271, 0231, 0081, 0661, 0021
<b>Tokaido</b>	0861
<b>Tokyo</b>	0081, 0041, 2641
<b>Tomashi</b>	0481, 0351
<b>Tongguang</b>	0471, 0701
<b>Tongtel</b>	1631, 1281
<b>Topline</b>	0861, 1271
<b>Toshiba</b>	0011, 0021, 0041, 0051, 0061, 0081, 0101, 0111, 0171, 0191, 0211, 0471, 0701, 0411, 0501, 1301, 1351, 1441, 1781, 1951, 2021, 0341, 2341, 2481, 0861, 2351, 3671, 2801, 3821, 4151, 3921, 3931
<b>Towada</b>	0191, 0081
<b>Toyoda</b>	0021, 0641, 0471
<b>Trakton</b>	0021, 0471, 0081

---



<b>Trans Continens</b>	1271, 0081, 0861, 0061, 1221
<b>TRANScontinents</b>	0861, 2101, 3031, 1881
<b>Transonic</b>	0061, 1301, 0861, 1331, 0751, 1281, 0471, 0821, 0021
<b>Transtec</b>	0081
<b>Triad</b>	0061, 0861, 0351
<b>Trident</b>	1611, 0081
<b>Tristar</b>	0471, 0351, 0301
<b>Triumph</b>	0271, 1611, 0581, 0861, 0061
<b>Tsoschi</b>	0481
<b>Tuntex</b>	0021
<b>TVS</b>	4071
<b>TVTEXT-95</b>	0861
<b>U à Z</b>	
<b>Uher</b>	0531, 0061 0861, 0661, 0821, 1221, 1371, 0461, 0771
<b>Ultravox</b>	0191, 0661, 0431, 0081, 0231, 0061, 0861
<b>Unic Line</b>	0061, 0861, 0761, 0751
<b>United</b>	1351, 0061, 1341, 0861, 2341, 1281
<b>Universal</b>	1351, 0061, 0861
<b>Universum</b>	0061, 0581, 0141, 0181, 1621, 0011, 0471, 0761, 1371, 0431, 0841, 0771, 0551, 0821, 0031, 0051, 0111, 0231, 0861, 0891, 0401, 0331, 1981, 1271, 0081, 0211, 0671, 0561, 0271, 1091, 0021, 0251, 0261, 1951, 0411
<b>Univox</b>	0061, 0861, 0561, 0231





<b>Upstar</b>	0281, 1171
<b>Utax</b>	0231
<b>V7 Videoseven</b>	1541, 0281, 1931, 3021, 2181
<b>Vector Research</b>	5101
<b>Vestel</b>	0061, 0231, 0081, 0861, 1271, 1951
<b>Vexa</b>	0021, 0061, 0861
<b>Victor</b>	0931, 0051, 0501
<b>Vidao</b>	5101, 4021
<b>Videocon</b>	0041, 3161, 0471, 2641
<b>Videologic</b>	0351, 0081
<b>Videosat</b>	0431
<b>VideoSystem</b>	0061, 0861
<b>Videotechnic</b>	0081, 0531, 0661
<b>Videoton</b>	0231
<b>Vidikron</b>	0191
<b>Vidtech</b>	0051, 0281
<b>Viewpia</b>	1901
<b>ViewSonic</b>	1541, 2941, 0861
<b>Viore</b>	3961, 3991, 0411
<b>Viper</b>	0561
<b>Visiola</b>	0081
<b>Vision</b>	0061, 0531, 0471, 0861, 0081



<b>Vistar</b>	0231
<b>Vizio</b>	2511, 4091, 4101, 0281, 4121, 4111, 1401, 3791
<b>Vortec</b>	0061, 0861
<b>Voxson</b>	0231, 0281, 0061, 0861, 0821
<b>Waltham</b>	0081, 0821, 0491, 0061, 0861, 1271, 0211, 0231, 0731
<b>Wards</b>	0281, 5101, 4661
<b>Warumaia</b>	0661, 1211
<b>Watson</b>	0061, 0861, 0531, 2271, 0231, 0021, 1271, 0351, 0691, 2341, 3021, 3071, 0401
<b>Watt Radio</b>	0191, 0231, 0081
<b>Waycon</b>	0041
<b>Wega</b>	0051, 0061, 0861
<b>Wegavox</b>	0021, 0061, 0861
<b>Weipai</b>	0021
<b>Welltech</b>	1351
<b>Weltblick</b>	0061, 0861, 0531, 0081
<b>Weltstar</b>	0861
<b>Westinghouse</b>	4101, 4771, 4971, 2411, 1981, 0911, 3661, 4071
<b>Weston</b>	0061, 0861
<b>Wharfedale</b>	0061, 1871, 0861, 2551
<b>White Westinghouse</b>	0061, 0531, 0081, 0861, 0561, 2411
<b>Windsor</b>	1271, 0861



<b>Windstar</b>	0481, 0561
<b>Windy Sam</b>	0861
<b>Wintel</b>	1351
<b>World-of-Vision</b>	1931, 1961, 1881, 1351, 2321, 1911, 2181
<b>Worldview</b>	0751, 0091
<b>X-View</b>	2071
<b>Xenius</b>	1111, 1211
<b>Xiahua</b>	0021, 0471, 0701, 1301, 1581, 1601
<b>Xianghai</b>	0021
<b>Xiangyang</b>	0471, 0701
<b>Xihu</b>	0471, 0701
<b>Xinanghai</b>	0701
<b>Xingfu</b>	0021
<b>Xinghai</b>	0471
<b>Xingyu</b>	0021
<b>Xinsida</b>	2641
<b>Xlogic</b>	1301, 1631
<b>Xoro</b>	2091, 2181
<b>Xrypton</b>	0061, 0861
<b>Yamaha</b>	0501, 2451, 5101
<b>Yamishi</b>	0481, 0751, 0351, 0061, 0861, 0081
<b>Yingge</b>	0021



---

<b>Yokan</b>	0061, 0861
<b>Yoko</b>	0061, 0081, 0471, 0861, 0351, 0021, 1371, 0341, 0431
<b>Yonggu</b>	0021
<b>Yorx</b>	0351
<b>Yousida</b>	0021
<b>Yuhang</b>	0021
<b>Zanussi</b>	0231, 0081
<b>Zenith</b>	0281, 2411, 4201, 4071, 5101
<b>Zenor</b>	0341
<b>Zhuhai</b>	0021, 0661
<b>Zonda</b>	1301, 1601
<b>ZX</b>	2341

---