



Codes de programmation pour une télécommande simplifiée

Téléviseurs

A à C	
A-Mark	10003
Abex	10032
Accurian	11803
Admiral	10093, 10463, 10179
Advent	10761, 10817, 11528, 11570, 11933
Adventura	10046
Aiko	10092
Aiwa	10032, 10701
Akai	10812, 11675, 10765, 10030, 10098, 10672, 11207, 11385, 11676, 11688, 11689, 11692
Alaron	10179, 10183
Albatron	10843
America Action	10180
Anam	10180
AOC	10030, 10003, 10019, 11089
Aomni	11623



Apex Digital	10748, 10879, 10765, 10890
Archer	10003
Astar	11531, 11738
Audiovox	10180, 10092, 10003, 10802, 10846, 10875, 11766, 11769, 11803, 11865, 11951, 11952
Aventura	10171
Belcor	10019
Bell & Howell	10154, 10016
Ben Q	11032, 11315
Bradford	10180
Brilliant	11007
Brockwood	10019
Broksonic	10236, 10463, 10003, 11905, 11911, 11935
Byd:sign	11309
Candle	10030, 10046, 10056, 10186
Carnivale	10030
Carver	10054
Casio	11205
CCE	10217
Celebrity	10000
Celera	10765
Changhong	10765



Chia	10093
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 11669, 11935
Clarion	10180
Coby	11538, 12017
Commercial Sol.	10047
Concerto	10056
Contec	10180
Craig	10180
Crosley	10000, 10054
Crown	10180
Curtis	11326, 11264, 11080, 11178, 11665
Curtis Mathes	10047, 10054, 10154, 10093, 10060, 10030, 10145, 10166, 10016, 10056, 10466, 10747, 11919, 11959
CXC	10180
Cytron	11326
D à I	
Daewoo	10154, 10092, 10066, 10661, 10672, 11909
Daytron	10019
Delta	11369
Denon	10145
Diamond Vision	11996
Digistar	11565



Digital Lifestyles	11765, 11822
Dumont	10017, 10019
Durabrand	10463, 10180, 10178, 10171, 11034, 10003, 11665
Dwin	10747
Dynex	11463, 11785
Electroband	10000
Electrograph	11755, 11623
Electrohome	10463, 11570, 11670
Element	11687
Emerson	11864, 10154, 10236, 10463, 10180, 10178, 10171, 11963, 11913, 11911, 11909, 11665, 10282, 10280, 10183, 10181, 10179, 10038, 10019
Emprex	11422, 11546, 11765
Encross	10876
Envision	10030, 10813, 11365, 12014
Epson	11122
ESA	10812, 10171, 11963
Fisher	10154, 10159
Fluid	10154, 10156, 11265, 10060, 10003, 10036, 10149, 11343, 11369, 11935, 11959
Fujitsu	10179, 10186, 10683, 10853
Funai	10000, 10180, 10171, 10179, 11904, 11963
Futuretech	10180



Gateway	11755, 11756
GE	10047, 10051, 10765, 10178, 10021, 10029, 10135, 10279, 10282, 10747, 11907, 11919, 11922
GFM	11864, 10171, 11665, 11963
Gibraltar	10017, 10030, 10019
Go Video	10886, 11823, 11831
GoldStar	10178, 10030, 10019, 10032, 10056
GPX	10179
Grundig	10683
Grunpy	10180, 10179
H & B	11366
Haier	11034, 10768, 11009, 11570
Hallmark	10178
Hanns.G	11783
Hannspree	11348, 11745, 11783
Harley Davidson	10179, 11904
Harman/Kardon	10054
Harvard	10180
Havermy	10093
Helios	10865
Hewlett Packard	11494, 11088, 11089, 11101
Hisense	10748, 11314, 11660



Hitachi	10145, 10016, 10032, 10036, 10038, 10056, 10095, 10096, 10151, 10217, 10227, 10279, 10413, 10797, 11345, 11904
HP	11494, 11088, 11089, 11101
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11463, 11286, 11603, 11665, 11684, 11990
Innity	10054
Initial	11603, 11990
Insignia	10463, 10171, 11204, 11326, 11385, 11517, 11660, 11785, 11963, 12002
Inteq	10017
IX	10877
J à O	
Janeil	10046
JBL	10054
JCB	10000
Jensen	10761, 10817, 11299, 11326, 11933
JVC	10463, 10053, 10036, 10160, 10169, 10731
KLH	10765, 11962
Kloss	10024, 10046
Konka	10707, 11385, 11831
Kost	11262, 11483
Kreisen	10876



KTV	10178, 10180, 10030, 10183, 10217, 10280, 10442, 10856, 11178, 11265, 11530, 11637, 11934
Liteon	11088
LG	10171, 10178
Lloyd's	11904
Logik	10016
Luxman	10056
LXI	10047, 10054, 10154, 10156, 10178, 10747
Mag	11687
Magnavox	11755, 10054, 10051, 10030, 10171, 10706, 11990, 11963, 11913, 11904, 11365, 11198, 11802, 10230, 10187, 10186, 10179, 10096, 10036, 10024, 10020
Magnasonic	11913
Magnin	11907
Majestic	10016
Marantz	10054, 10030, 10854, 11398, 11714
Matsushita	10250
Maxent	11755, 11597, 11714, 11757
Megatron	10178, 10145, 10003
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11665, 11670, 11785, 11911, 11920
Midland	10047, 10017, 10051, 10032, 10135, 10747
Mintek	11603, 11990
Minutz	10021



Mitsubishi	11250, 10093, 10150, 10178, 10019, 10036, 10098, 10155, 10331, 10592, 11797
Monivision	10843
Motorola	10093, 10835
Moxell	10835
MTC	10060, 10030, 10019, 10056
Multitech	10180, 10217
NAD	10156, 10178, 10056
NEC	10030, 10019, 10036, 10056, 10455, 10876, 11398, 11797, 12026
NetTV	11755
Nikko	10178, 10030, 10092
Norcent	10748, 10824, 11089, 11365, 11590, 11591, 11745
Norwood Micro	11286, 11303
Noshi	10018
NTC	10092
Olevia	11610, 11144, 11240
Onwa	10180
Optimus	10250, 10154, 10166, 11913
Optoma	11348
Optonica	10093, 10165
Orion	10236, 10463, 11463, 10179, 11905, 11911



P à Su	
Panasonic	10250, 10051, 11919
Penney	10047, 10156, 10051, 10060, 10178, 10030, 11919, 11907, 10747, 10149, 10135, 10110, 10032, 10027, 10021, 10019, 10018, 10003
Philco	10054, 10030, 10171, 10019, 10020, 10024, 10096, 10179, 10187, 11665, 11963
Philips	10054, 10171, 10230, 10690, 11483
Pilot	10030, 10019
Pioneer	10166, 10038, 10172, 11398
Planar	11288
Polaroid	10765, 12063, 12002, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11385, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865
Portland	10092, 10019
Prima	10761, 10817, 11785, 11933
Prism	10051
Proscan	10047, 10030, 10466, 10747, 11922
Protron	11323
Proview	10835, 11687
Pulsar	10017, 10019
Quasar	10250, 10051, 10165, 10219, 11919
RadioShack	10047, 10154, 10180, 10178, 10030, 10019, 10032, 10056, 10165, 10747, 11904, 11920



RCA	10047, 10051, 10093, 10018, 10019, 10029, 10038, 10090, 10135, 10747, 11907, 11919, 11922, 11959, 12002, 12746, 12334, 14214, 12932, 12247, 13577, 13382, 13717, 13332, 13419, 13636, 12855, 13938, 13939, 14093, 13183
Realistic	10154, 10180, 10178, 10030, 10019, 10032, 10056, 10165
Runco	10017, 10030, 10612, 11398
Sampo	11755, 10030, 10032, 10110, 11597
Samsung	10812, 10060, 10178, 10030, 10019, 10032, 10056, 10217, 10482, 10587, 10766, 10814, 11959
Sansui	10463, 10171, 11463, 10165, 11670, 11904, 11911, 11935
Sanyo	10054, 10154, 10036, 10088, 10146, 10159, 10232, 10484, 11907
Sceptre	10878, 11360, 11599
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 11711
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10056, 10146, 10146, 10149, 10159, 10168, 10179, 10747, 11007, 11904
Sense	11865
Sharp	10093, 10165, 10845
Sheng-Chia	10093
Sherwood	11399
Shogun	10019
Signature	10054, 10016
Signet	11262



Simpson	10186, 10187
Skyworth	11799
Sole	11366, 11377, 11483, 11530, 11623
Sony	10000, 11685, 11904
Soundesign	10180, 10178, 10179, 10186
Sova	11952
Soyo	11746, 11824, 11826, 11891
Spectricon	10003
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBriteTV	11610, 11420
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
Sv à Z	
SVA	10748, 10587, 10768, 10865, 10871, 11963
Sylvania	11864, 10054, 10030, 10171, 10020, 10024, 10096, 10187, 10587, 11314, 11665, 11913, 11963
Symphonic	10180, 10171, 11904, 11913



Syntax	11610, 11144, 11240
Tandy	10093
Tatung	10003, 11101, 11286, 11287, 11288, 11361, 11756
Technics	10250, 10051
Technol Ace	10179
Techview	10847, 12004
Techwood	10051, 10003, 10056
Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10056, 10179, 10186
Telefunken	10056
Thomas	11904
Thomson	10209, 10210, 10625
TMK	10178, 10056
TNCi	10017
Toshiba	10154, 10156, 11265, 10060, 10003, 10036, 10149, 11343, 11369, 11935, 11959
TruTech	11665, 11723, 12066
TVS	10463
Ultra	11323
Universal	10027
US Logic	11286, 11303
Vector Research	10030
Venturer	11865



VEOS	11007
Victor	10053
Video Concepts	10098
Vidikron	10054, 11398
Vidtech	10178, 10019, 10036
Viewsonic	11755, 10797, 10857, 10885, 11330, 11365, 11578, 11597, 11627, 11742, 12104
Viking	10046
Viore	11207, 11684, 11811
Vizio	11758, 10864, 10885, 11756
Wards	10000, 10047, 10054, 10017, 10154, 10156, 10051, 10180, 10060, 10178, 10030, 10187, 10186, 10179, 10165, 10016, 10018, 10096, 10056, 10020, 10021, 10029, 10027, 10024
Waycon	10156
Westinghouse	10885, 10889, 10890, 11282
White Westinghouse	10463, 11909
Wyse	11365
Yamaha	10030, 10019, 10797, 11407
Zenith	10000, 10047, 10017, 10463, 11265, 10178, 10030, 10145, 10092, 10016, 10160, 11904, 11909, 11911
Zonda	10003 11935 11365, 11590, 12014
